


Настройка PPPoE на Upvel UR-354AN4G

1. Откройте любой веб-браузер (Google Chrome/Mozilla Firefox или другие) на устройстве, которое подключено по Wi-Fi или с помощью кабеля к роутеру.




В адресной строке напишите 192.168.10.1 (адрес указан на корпусе роутера) и нажмите **Enter**.

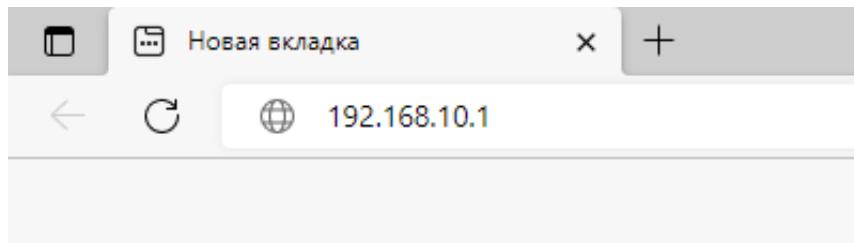

Иногда вместо интерфейса открывается поисковик. В таком случае попробуйте ввести в адресную строку <https://192.168.10.1/>

Если интерфейс роутера все равно не открылся, то можно [сбросить настройки](#) через кнопку RESET на корпусе роутера.

2. Пройдите авторизацию. Данные для входа можно посмотреть на корпусе роутера. Обычно используется admin / admin.

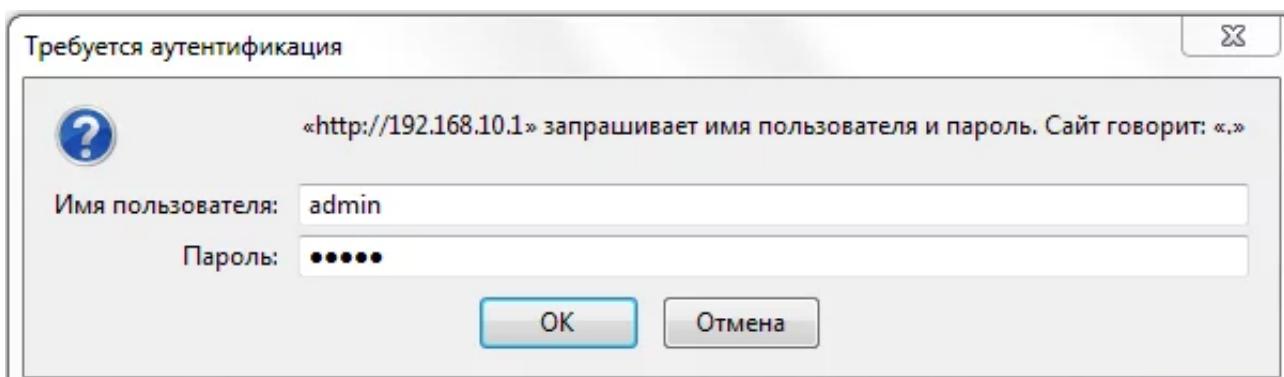

3. Вверху выберите **Настройка интерфейсов** → **Интернет**

- Режим передачи данных поменяйте на **Ethernet**, включите переключатель в строке Состояние
- В разделе Инкапсуляция, Интернет-провайдер выберите **PPPoE**
- В разделе PPPoE, введите Логин из договора в строку **Имя пользователя**, в строку **Пароль** введите ваш пароль из договора
- Сохраните настройки.

The screenshot shows the Upvel UR-344AN4C router's configuration interface. The top navigation bar includes the brand logo, model name (UR-344AN4C), language selection (Язык: English/Russian), and tabs for Interface Configuration, Advanced Interface Configuration, and other system settings.

The main configuration area is titled "Настройка интерфейсов" (Interface Configuration). It contains several sections:

- WAN Transfer Mode:** Shows the current mode as "Ethernet" (selected from a dropdown menu).
- MULTI SERVICE:** Displays the service number (0) and a summary button. The "Состояние" (Status) is set to "Вкл." (Enabled), which is highlighted with a red box.
- IPv4/IPv6:** IP version selection (IPv4 selected).
- Инкапсуляция:** Provider selection. "Интернет-провайдер" is set to "PPPoE" (selected from a radio button group), which is highlighted with a red box.
- 802.1q:** VLAN configuration. "802.1q" is set to "Вкл." (Enabled), and the VLAN ID is set to 0.
- PPPoE:** Connection details. The "Имя пользователя" (Username) and "Пароль" (Password) fields are both highlighted with red boxes.
- Настройки подключения:** Connection type selection, currently set to "Посттранзит" (Posttransit).