


# Настройка PPPoE на Totolink

1. Откройте любой веб-браузер (Google Chrome/Mozilla Firefox или другие) на устройстве, которое подключено по Wi-Fi или с помощью кабеля к роутеру.



В адресной строке напишите 192.168.1.1 (адрес указан на корпусе роутера) и нажмите **Enter**.

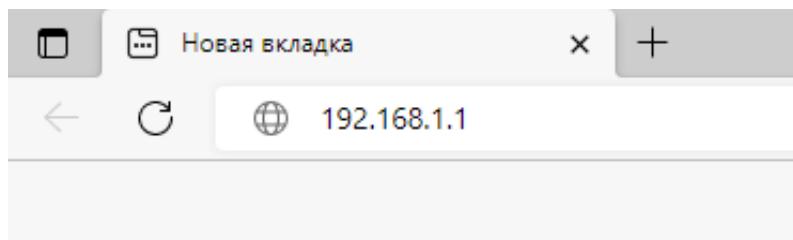


Иногда вместо интерфейса открывается поисковик. В таком случае попробуйте ввести в адресную строку <https://192.168.1.1>

Если интерфейс роутера все равно не открылся, то можно [сбросить настройки](#) через кнопку RESET на корпусе роутера.

2. Пройдите авторизацию.

Данные для входа можно посмотреть на корпусе роутера. Обычно используется admin / admin.

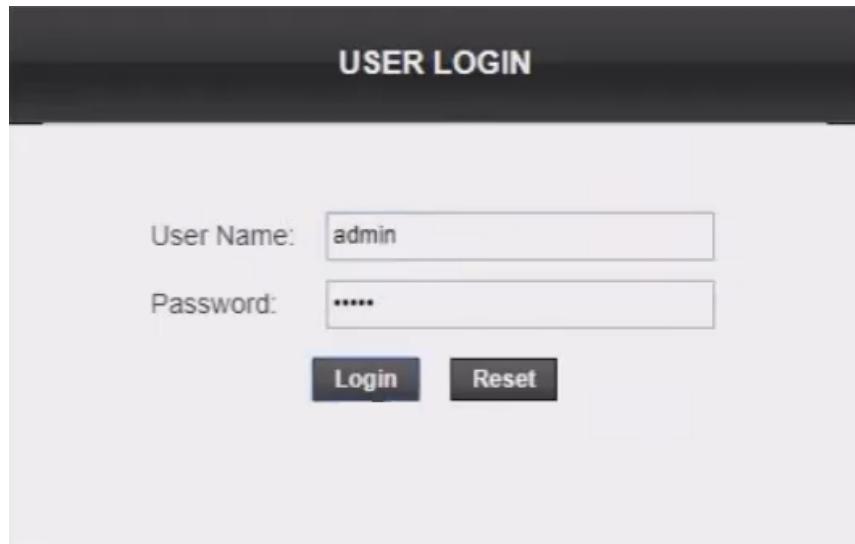

3. Слева выберите раздел **Network**, затем подраздел **Wan Setting**. Укажите параметры **PPPoE соединения**, после чего сохраните настройки, нажав кнопку **Apply**.

1. **Wan Connection Type** - PPPoE
2. **User name, Password** - указываем данные PPPoE по договору
3. **Connection Mode** - Auto
4. **DNS Mode** - Automatically

System Status
Operation Mode
Network
Wan Setting
LAN Setting
Static DHCP Setting
5G Wireless
2.4G Wireless
QoS
Firewall
Management

### WAN Setting

This page is used to configure the parameters for Internet network which connects to the WAN port of your device. Here you may change the access method to DHCP, Static IP, PPPoE...

Connection Status	PPPoE
WAN Connection Type	1 PPPoE
User Name	2
Password	
Special Type	None
Connection Mode	3 Auto
MTU	1492 (546-1492)
DNS Mode	4 Attain DNS Automatically
Primary DNS	
Secondary DNS	
Clone MAC Address	00 : E0 : 4C : 81 : 96 : C2
	克隆MAC 缺省MAC

Apply